 


M06

QUICK INSTALL

 
快速安装

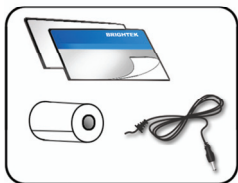

北京炜煌科技发展有限公司
Beijing Bright Technology Development Co., Ltd



● 打印机各部件一览 Printer Parts Names

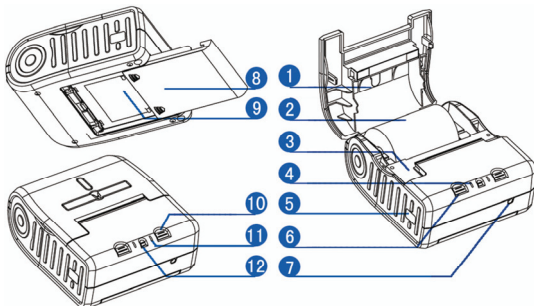

1. 纸仓盖 Paper Case Cover

2. 打印纸 Paper Roll

3. 色带 Ribbon

4. 电源指示灯 Power Indicator

5. 红外接口 IR Port

6. 电源开关 Power Button

7. 充电电源接口 Power Connector

8. 电池盖 Battery Cover

9. 电池 Battery

10. LF 键 LF Button

11. 状态指示灯 Status Indicator

12. SEL 键 SEL Button

按钮开关的操作及指示灯

开机：打印机按住电源开关 3 秒钟，电源打开。工作状态指示灯闪亮。少于 3 秒钟电源不动作。

关机：在开机状态，按压电源开关 3 秒钟，电源关闭，工作状态指示灯熄灭。少于 3 秒钟电源不动作。

走纸：按压走纸键（LF 键），按下开始进纸，放开停止进纸。

自检检测方式

关机状态下按压走纸键（LF）键，然后开机，可以打印自检。

Operation Specification

After press the power button and hold on for 3 seconds, then the power is on. The status indicator flashes.

 
In the power-on state, press the power button and hold on for 3 seconds, then the power is off. The status indicator light turns off.

Press the paper feed button (LF button), the printer starts feeding paper. If release the button, it will stop feeding paper.

The Self Test

In the power-off state, press the paper feed button (LF button), not release and power on. Then the printer will print self-check scrip.

● 尺寸 Size

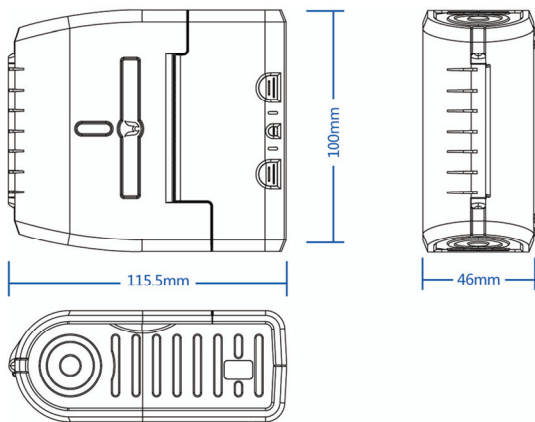


WH-M06 型尺寸 Product Size:

外形尺寸 Outline Dimension:

115.5mm×100mm×46mm

 ● 安装 Installation

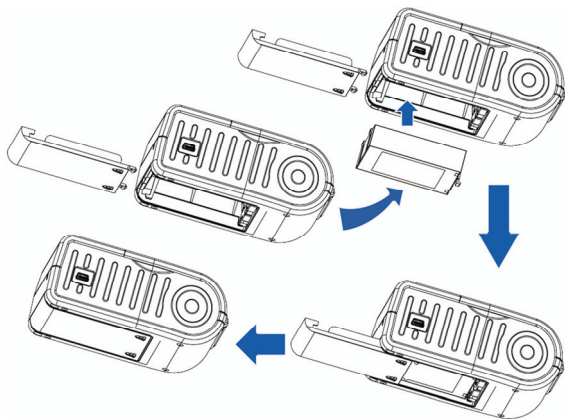


安装方法：

如图推开电池盖，将电池下端两个卡位卡入打印机内，并用力将另一端扣入，电池盖推回即可。

Installation Method

As the picture show, push the battery cover open, and put the battery into the printer rightly, then push the battery cover back.

 ● 连接 Connection

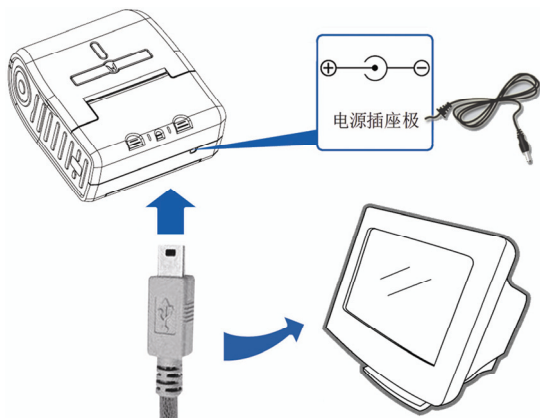

通讯连接:

USB 和串口连接: 请严格参照公司网站所提供说明书所示引脚定义连接。

蓝牙连接: 1. 建立连接: 当 PDA 和打印机连接成功后, PDA 显示打印机的默认名称为 Brightek Thermal Printer, 表示连接成功。2. 蓝牙的密码: 0000.

电源连接:

便携式微型打印机使用充电电池供电。打印机工作过程中, 剩余电量大于 50% 时, 双色电源指示灯绿灯常亮; 当电池电量 50%~30% 时, 双色电源指示灯黄灯常亮; 当电池电量低于 30% 时, 双色电源指示灯红灯常亮。当电池电量不足以支持正常打印功能时, 打印机将自动关机。当打印机进入休眠状态时, 电源指示灯闪烁。充电过程中, 充电器双色指示灯显示红色, 充电完毕, 双色指示灯变成绿色。

Communication Connection

 
USB and serial port connector please refer to the printer manual on company website.

Bluetooth connect: 1. When the blue tooth device connects well with printer "Brightek Thermal Printer" can be found. 2. The password: 0000.

Power Connection

In the printer working process, the remaining capacity is greater than 50%, three-color power indicator, green light keep bright; when the battery power 50% ~ 30%, three-color power indicator, the yellow light keep bright; when the battery is less than 30%, three-color power indicator, the red light keep bright; When the battery power is too low to support normal printing, the printer will automatically shut down. In the process of charging, the charger-color indicator light shows red. When charging is completed, three-color indicator light turns green.

●装纸 Paper Roll

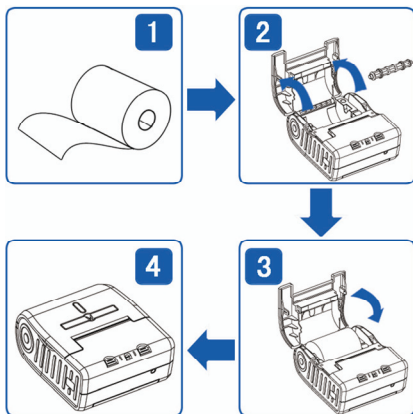


安装步骤:

1. 如图 2 所示沿着箭头方向翻开活动纸仓盖。
2. 把打印纸装入，并拉出一截，放到进纸口。
3. 开机。按下 LF 键使机头转动，如果纸走歪，重新进纸，再按下 LF 键。
4. 合上纸仓盖。

Replacing the Paper Roll

1. As the Fig.1 show, open the paper case cover follow the arrow.
2. Insert the paper roller into the printer, and insert the paper to the feeder.
3. Power the printer on, then press LF button to make the printer head to run, the paper will come out.
4. Close the paper case cover.

 ● 色带 Ribbon

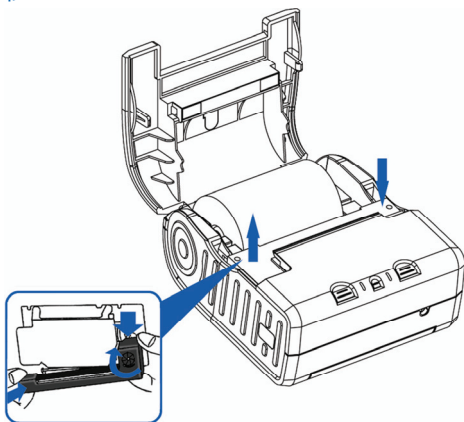

色带更换:

1. 翻开纸仓盖.
2. 从打印机头上轻轻取下旧色带盒。注意:请先抬起色带盒的左端,然后再抬起色带盒的右端,取下色带盒。
3. 换新的色带盒。首先将色带盒的右端轻轻放在机头右端的齿轮轴上,左端稍微抬起,不要放下。如色带盒右端未落到底,请按住色带盒上的旋钮,顺时针方向稍微转动一下,直到色带盒的右端落到底后再放下色带盒的左端。
4. 合上纸仓盖即可。

Printer Cleaning

1. Open the paper cover of printer.
2. Take down the old ribbon cassette, notice: lift up the left end of the ribbon cassette, then lift up the right end, and then take down the ribbon cassette.
3. Installing new one: put down gently the right end of ribbon cassette on the gear wheel in the print head, lift up the left a little, don't put down, if the right edge is not down to the bottom, rotate the knob of the ribbon cassette slightly inclockwise direction as shown in the image, until the ribbon cassette is down to the bottom, then put down the left.
4. Close the paper cover.

● 产品规格一览表 Product Specification

项目 ITEMS	规格 SPECIFICATION
打印方式 Printing method	针式打印 Dot matrix printing method
纸宽 Paper width	57mm
打印宽度 Print width	48mm
分辨率 resolution ration	240 dots/line , 5 dots/mm
每行字符数 Character per line	40
打印速度 Printing speed	5.5mm/s
充电器 Charging	Input AC 100~240, 1.0A Output DC 8.4V, 1.2A
电池 Battery	Output DC7.4V(8.4V~6.8V), 1800mAh
充电时间 Charging time	2.5 hours
电池寿命 Battery lift	500 time
纸的规格 Paper supplied	57mm wide, 40mm ϕ
接口 Interface	Serial (RS232)/USB/Blue tooth/WIFI/IrDA
温度 Temperature	Printer -10℃~50℃ (14°F~122°F)
温度 Temperature	Battery 0℃~40℃ (32°F~104°F)
湿度 Humidity	Printer 10%~90% RH
湿度 Humidity	Battery 20%~70% RH