 


M01/M02

QUICK INSTALL


快速安装

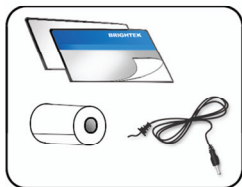

北京炜煌科技发展有限公司
Beijing Bright Technology Development Co., Ltd



● 打印机各部件一览 Printer Parts Names

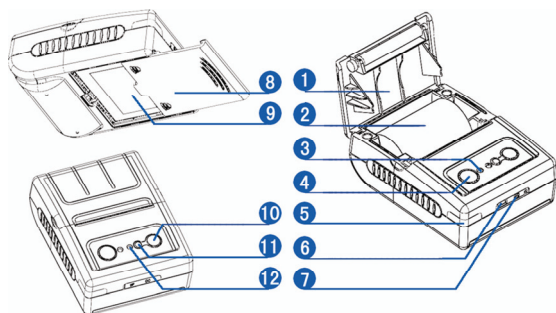

1. 纸仓盖 Paper Case Cover

2. 打印纸 Paper Roll

3. 电源指示灯 Power Indicator

4. 电源开关 Power Button

5. 红外接口 IrDA

6. 数据接口 Interface Connector

7. 电源接口 Power Connector

8. 电池盒 Battery Cover

9. 电池 Battery

10. LF 键 LF Button

11. SEL 键 SEL Button

12. 状态指示灯 Status Indicator

按钮开关的操作

开机：打印机按住电源开关 3 秒钟，电源打开。工作状态指示灯闪亮。少于 3 秒钟电源不动作。

关机：在开机状态，按压电源开关 3 秒钟，电源关闭，工作状态指示熄灭。少于 3 秒钟电源不动作。

自检检测方式

关机状态下按压走纸键（LF 键），然后开机。可以打印自检。

Operation Specification

After Press the power button and hold on for 3 seconds, then the power is on. The status indicator flashes.


In the power-on state, press the power button and hold on for 3 seconds, then the power is off. The status indicator light turns off.

Press the paper feed button (LF button), the printer start feeding. If release the button, it will stop feeding paper.

The Self Test

In the power-off state, press the paper feed button (LF button), not release and power on. Then the printer will print self-check scrip.


● 尺寸 Size

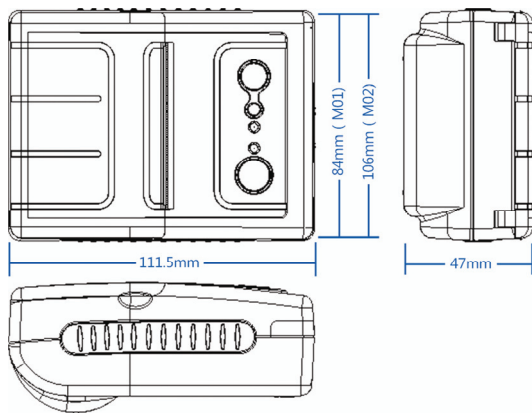

WH-M01 M02 型尺寸 Product Size:

外型尺寸 Outline Dimension: (M01) 111.5mmX84mmX47mm
(M02) 111.5mmX106mmX47mm

● 安装 Installation

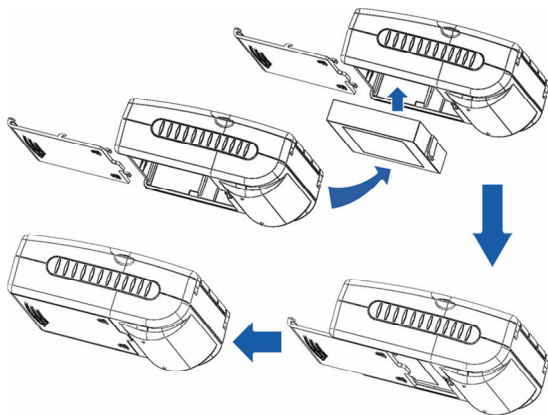


安装方法:

如图推开电池盖，将电池下端两个卡位卡入打印机内，并用力将另一端扣入，电池盖推回即可。

Installation Method

As the picture show, push the battery cover open, and put the battery into the printer rightly, then push the battery cover back.

● 连接 Connection

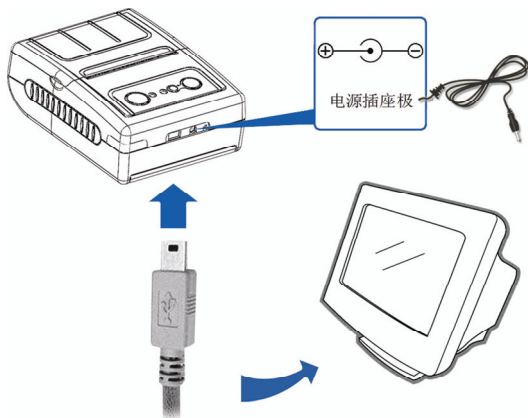

通讯连接:

USB 和 串口连接: 请严格参照公司网站所提供说明书所示引脚定义连接。

蓝牙连接: 1. 建立连接: 当 PDA 和打印机连接成功后, PDA 显示打印机的默认名称为 Brightek Thermal Printer, 表示连接成功。2. 蓝牙的密码: 0000.

电源连接:

便携式微型打印机使用充电电池供电。打印机工作过程中, 剩余电量大于 50% 时, 双色电源指示灯绿灯常亮; 当电池电量 50%~30% 时, 双色电源指示灯黄灯常亮; 当电池电量低于 30% 时, 双色电源指示灯红灯常亮。当电池电量不足以支持正常打印功能时, 打印机将自动关机。当打印机进入休眠状态时, 电源指示灯闪烁。充电过程中, 充电器双色指示灯显示红色, 充电完毕, 双色指示灯变成绿色。

Communication Connection


USB and serial port connector please refer to the printer manual on company website.

Bluetooth connect: 1. When the blue tooth device connects well with printer, "Brightek Thermal Printer" can be found. 2. The password: 0000.

Power Connection

In the printer working process, the remaining capacity is greater than 50%, three-color power indicator, green light keep bright; when the battery power 50% ~ 30%, three-color power indicator, the yellow light keep bright; when the battery is less than 30%, three-color power indicator, the red light keep bright; When the battery power is too low to support normal printing, the printer will automatically shut down. In the process of charging, the charger-color indicator light shows red. When charging is completed, three-color indicator light turns green.

●装纸 Paper Roll

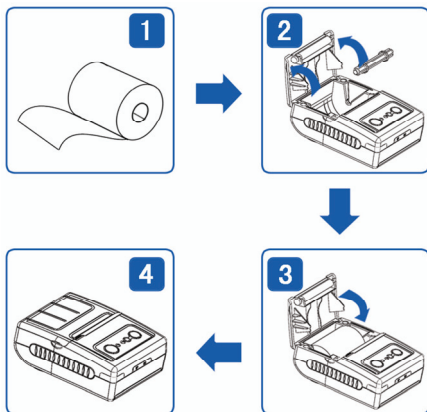


安装步骤:

1. 如图 2 所示沿着箭头方向翻开活动纸仓盖。
2. 把打印纸装入，并拉出一截(超出一小撕纸牙齿)，把纸放整齐，同时注意纸的方向有药液的一面（光滑面）向下。
3. 合上纸仓盖，打印头走纸轴压齐打印纸后稍用力把打印头走纸轴压回打印头。
4. 开机。按下 LF 键使机头转动，如果纸走歪，再按下 LF 键。

Replacing the Paper Roll

1. As the Fig.1 show, open the paper case cover follow the arrow.
2. Insert the paper roller into the printer, Pull out a small amount of paper. Notice the direction of the paper according to Fig.2.
3. Close the paper case cover. Press the platen roller back to the printer head.
4. Power the printer on, then press LF button to make the printer head to run, the paper will come out.

● 清洁 Cleaning

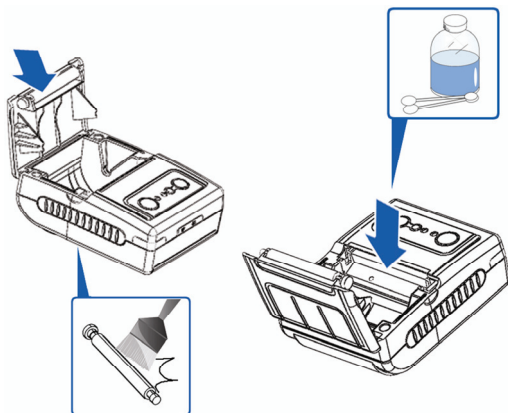

清洁保养：

热敏打印机使用久了以后，热敏条与滚轴上会留下一些污垢，如果不及时清理会影响到打印机的使用与寿命。我们建议您不定期做好清理。方法是打开纸舱盖，用棉棒沾少许酒精，轻轻擦拭打印机热敏头，及纸仓上的滚轴。

Printer Cleaning

If the interior of the printer is dusty, print quality can decline. So please clean the printer regularly. Open the cover of printer, then wipe the printer head with a cleaning pen and use a cloth moistened with an alcohol to solution to clean the paper sensor and the platen roller.

● 产品规格一览表 Product Specification

项目 ITEMS	规格 SPECIFICATION
打印方式 Printing method	热敏行式打印 Direct thermal line printing
纸宽 Paper width	(M01) 57mm / (M02) 80mm
分辨率 resolution ration	8 dots/mm (384 dots/line / 576 dots/line)
打印头寿命 life of printing head	50km
打印速度 Printing speed	60mm/sec
充电器 Charger	Input AC 100~240v, 1.0A Output DC 8.4v, 1.2A
电池 Battery	Output DC7.4v (8.4v~6.8v), 1800mAh
充电时间 Charging time	2.5 hours
电池寿命 Battery life	500 times
纸的规格 Paper supplied	热敏卷纸 Thermal roll paper (57mm/80mm wide, 40mmφ)
接口 Interface	Serial/USB, Bluetooth/WIFI, IrDA
温度 Temperature	Printer -10℃~50℃ (14°F~122°F)
温度 Temperature	Battery 0℃~40℃ (32°F~104°F)
湿度 Humidity	Printer 10%~90% RH
湿度 Humidity	Battery 20%~70% RH
主机重量 printer weight	(M01) 0.175kg / (M02) 0.215kg
电池重量 Battery weight	0.100kg